

## INSTALL ULTRACAGE FOR CANON EOS CAMERAS



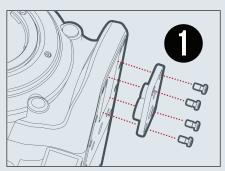

 Remove supplied DoubleTap plate from ultraCage bottom. Remove standard mounting plate from camera bottom. Replace with DoubleTap as shown using Canon plate screws.

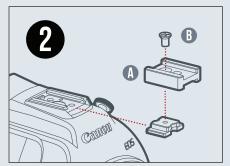

2. If required, attach Shoe Clamp Adapter (A) for C100 camera. Position clamp in camera shoe mount as shown and tighten screw (B).

Note: C300 mk/ll does not require Shoe Clamp.

