


Please Note: This adapter not compatible with Nikon "G" type lenses for aperture adjustment

Lens Mounting Indicator

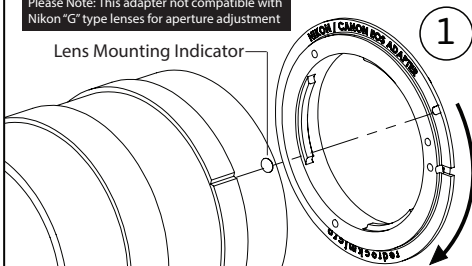

- 1: Rotate the Nikon EOS Adapter ring so that the Mounting Alignment Indicator (A) lines up with the lens' Mounting Indicator. With the front of the lens facing you, rotate the adapter clockwise until it is stopped by the lens' bayonet mount. It will *not* click into place.
- 2: On the rear mount of the lens, align the Guide Notch (B) with the locking pin notch of the lens mount. You may need to move either back or forth to see the lens' locking pin notch through the guide notch of the adapter, see window 2. Secure the primary set screw (C) by screwing in completely, but **DO NOT OVER-TIGHTEN**. Then secure the three secondary set screws fully (D) and loosen them a 1/4 turn to prevent unnecessary stress on your lens.

