


Retroflex

STYLIZED RIGGING

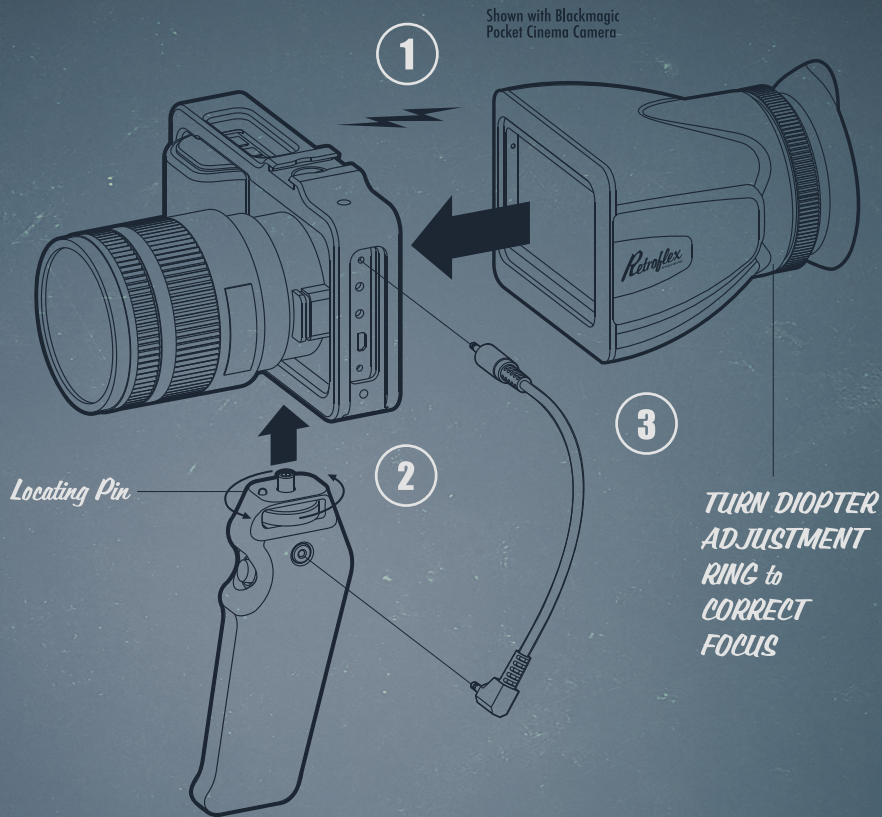

1

ATTACH EYEPIECE

Line up eyepiece as shown, magnets will snap into place

2

SECURE HANDLE

Align handle screw and locating pin with cage bottom. Tighten thumbscrew.

3

PLUG IN CABLE

Plug in cable as shown to activate Run/Stop button

Available for cameras with LANC protocol only

<http://start.redrockmicro.com>
Tutorials, forums, customer support



redrockmicro