



INSTALL OPTIONAL WIRELOCK ACCESSORY

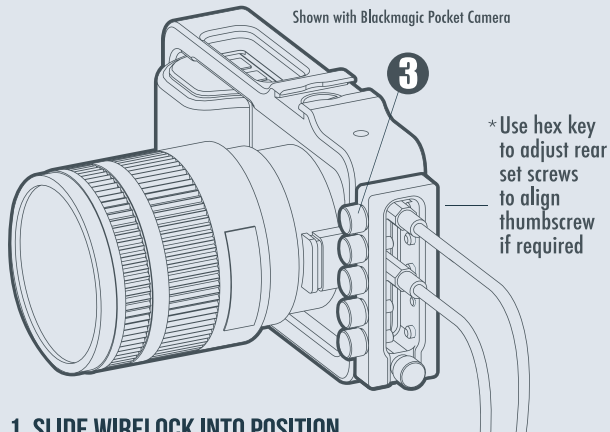

<http://start.redrockmicro.com>
Tutorials, forums, customer support

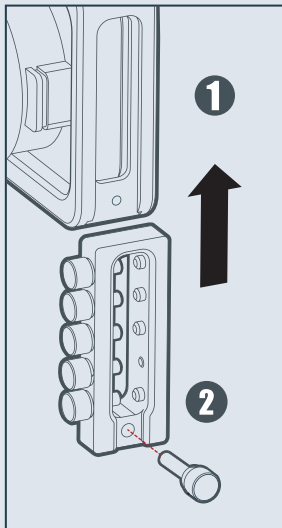

1. SLIDE WIRELOCK INTO POSITION
2. TIGHTEN THUMBSCREW TO SECURE
3. LOOSEN SIDE THUMBSCREWS, INSERT CABLES, THEN TIGHTEN THUMBSCREWS*

