

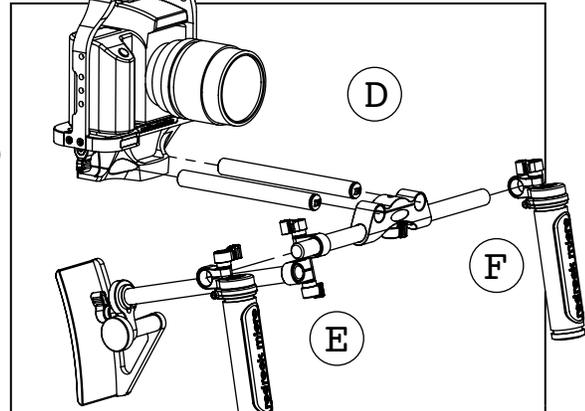
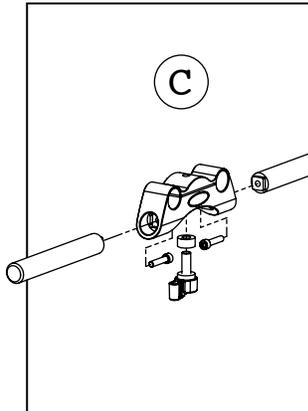
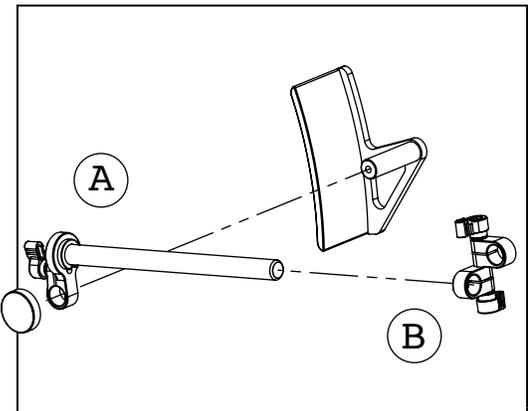



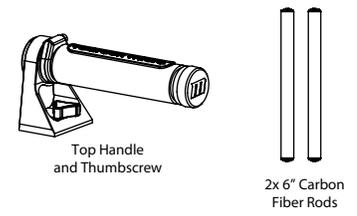


ultra Event BASIC Bundle Components

ultra Event Additional Options

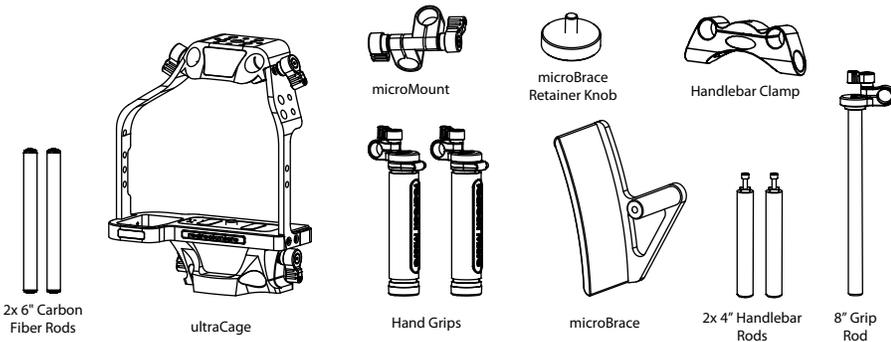

- A: Attach microBrace to Grip Rod by tightening Retainer knob.
- B: Attach Grip Rod to microMount as shown.
- C: Remove blue knob from Handlebar Clamp. Attach 4" grip rods using screws. Replace blue knob.
- D: Insert 6" Rods into Handlebar Clamp and ultraCage.
- E: Add microMount with Grip Rod and microBrace to Handlebar as shown.
- F: Add blue Hand Grips.

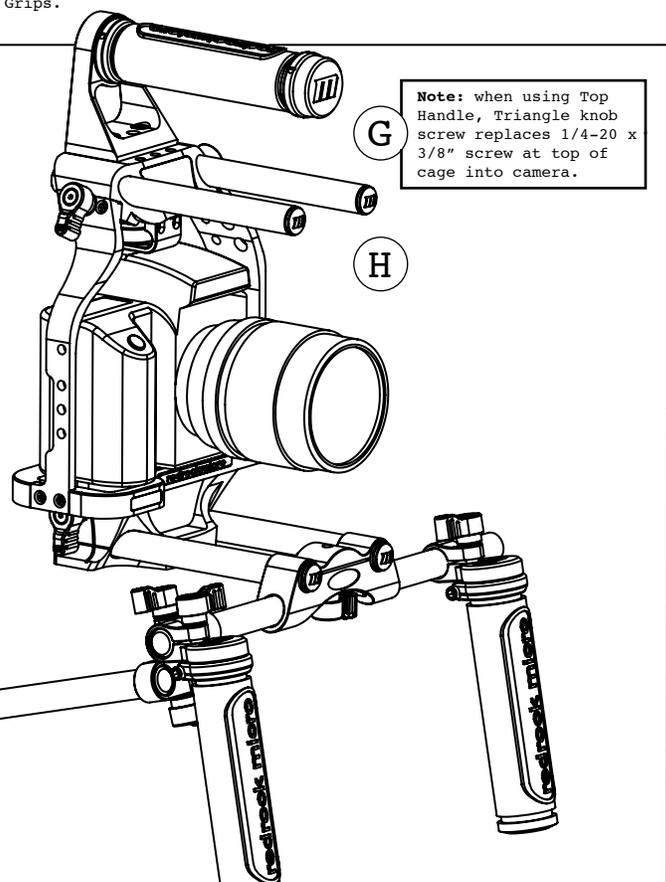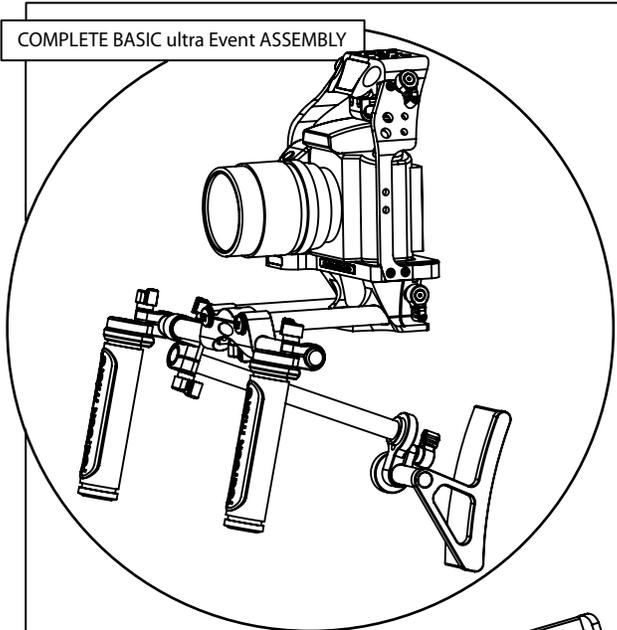

Note: when using Top Handle, Triangle knob screw replaces 1/4-20 x 3/8" screw at top of cage into camera.

ADDITIONAL OPTIONS

- G: Attach Top Handle. See above note.
- H: Insert 6" Carbon Fiber Rods into ultraCage.