


\* Shown using bottom hole set. See page bottom for camera guide.

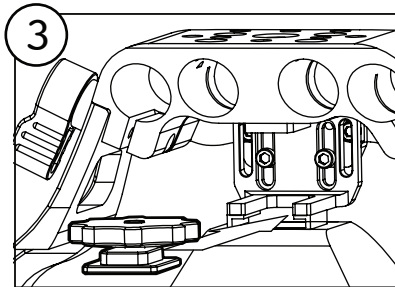

1. Put **Static Plate** in place in cage as shown and loosely tighten screws.
2. With camera installed in ultraCage, insert **Sliding Plate** as shown and loosely tighten screws into camera-specific holes\*. Slide plate down so it rests on top of your camera's shoe mount or, if using the ultraCage for Blackmagic, so it rests on top of ultraPlate. Tighten both screws from Step 1.
3. Insert **Thumbwheel/Shoe Clamp** so the bottom slides into the shoe mount and the top knob slides over the plate forks. Tighten screws from Step 2, then tighten Thumbwheel to secure camera in place.

\* Use top hole set for Nikon D800, Canon 5D mkIII, Use bottom hole set for Canon 5D mkII, 7D, Blackmagic Cinema Camera, Nikon D90